



## Dodge Ram 2002-2005


Part#DGANTMT

(For NMO style antenna mount)

**Parts included** are one stainless steel NMO antenna mount and a stainless steel 1/2" star washer.

**Tools** you need to install this mount. You will need a 10mm socket and or box end wrench.

Step 1: Set parking brake of vehicle. Open hood and locate 10mm bolt on the left front fender. Remove bolt.

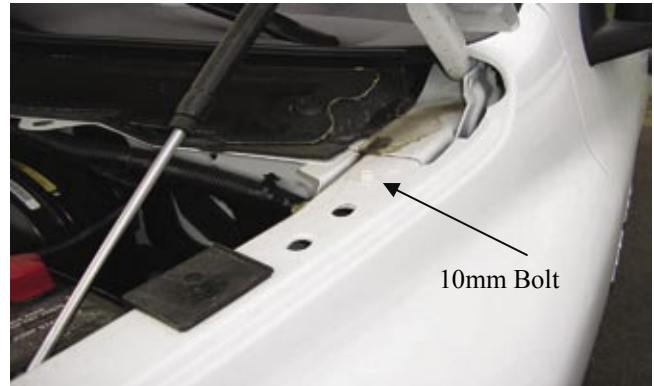

Step 2: Align the antenna bracket with the bolt hole. Reinstall bolt and tighten.



Step 3: Install NMO antenna mount on bracket. (NMO not supplied)



**Please read the following** Always check for good continuity between antenna mount and chassis ground. If having a problem with grounding, place the star washer that's provided between the NMO antenna mount and fender of the vehicle.

LCC ENTERPRISES,LLC. WILL NOT BE HELD LIABLE FOR ANY DAMAGE TO A VEHICLE AT ANY TIME DURING INSTALLATION AND OR REMOVAL OF THIS ANTENNA MOUNT. LCC ENTERPRISES,LLC WILL NOT BE HELD LIABLE FOR ANY PERSONAL INJURY DUE TO IMPROPER INSTALLATION. LCC ENTERPRISES,LLC. 213 CONGRESS STREET WEST, SAINT PAUL, MN 55107. PHONE 612.269.3188 OR FAX 612.677.3833.